

AIR TENT • Set Up Instructions

INSTRUCTIONAL CONTENTS

Items in your Packaging

Cleaning & Care

- A. Adding your top
- B. Inflating your Air Tent
- C. Taking Down your Air Tent

ITEMS IN YOUR PACKAGING

Verify that you have the following items:

1. Air Tent Frame
2. Air Tent Top
3. *Wall - Optional
4. Air Tent Storage Bag
5. Stakes Kit
6. Electrical Air Pump

CLEANING & CARE

To clean your top and frame we recommend using a soft brush with mild soap and water. Make sure to let your Air Tent air dry before storing away.




SAFETY



IMPORTANT: Read this information before proceeding. Not complying with these warnings will void your Ins'Tent warranty. It is the user's responsibility to take the following precautions at all times.

- Always stake or weight down your Air Tent.
- **DO NOT** use, set-up or leave your Air Tent in any potentially harsh weather conditions such as: windy weather, rain, hail, sleet, snow, drizzle, lightning etc.
- Ins'Tent tents are designed as temporary shelter.
- Do not leave your Air Tent unattended.
- Keep all flame and heat sources away from fabric roof and walls.
- Keep your canopy off of steep slopes and inclines.
- Make sure the Air Tent is completely dry before storing it.
- Never wash the Air Tent top and walls in a washing machine.
- Do not use detergent to clean your Air Tent.

A. ADDING YOUR TOP

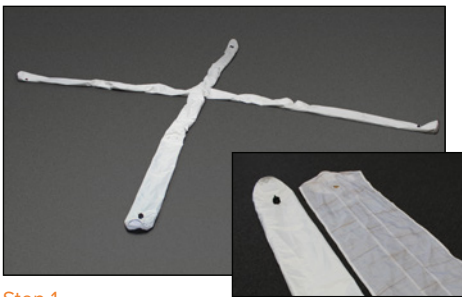


Step 1

Find a clean area away from any debris or sharp objects before setting up your Air Tent. Begin by spreading your Air Tent's frame and place the top above the frame so it aligns with each leg.



Step 2

Locate the air valves on each leg and insert them through the openings of each leg corner on your top.

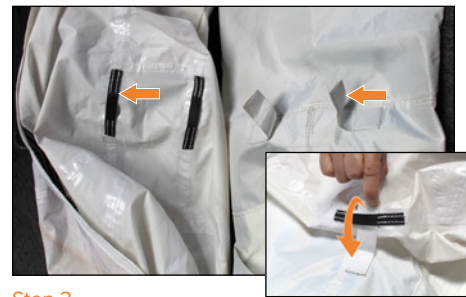

Step 3

Align the hook and loops on the frame to the top and connect them to secure your top onto the frame.

B. INFLATING YOUR AIR TENT



Step 4

Verify that all your air valves are closed except for the one you will be using. Use your electrical air pump and begin inflating your Air Tent.



Step 5

When your Air Tent begins to rise, turn off your pump and go to the center of your tent and lift it up.



Step 6

Finish inflating your Air Tent. Once it is firm, close your valve.

C. TAKING DOWN YOUR AIR TENT



Step 7


Secure your tent by adding sand bags to the pockets in each leg corner or by staking it to the floor.



Step 1

You do not need to remove your top from your tent.

Remove the weights or stakes from your Air Tent.

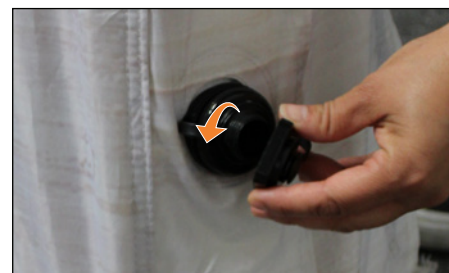

Step 2

Release all the black air valves from each leg and let the air out.



Step 3

Align the legs one on top of each other. **Make sure that the legs are straight and not twisted.**



Step 4

Start at the peak and begin to roll your top.



Step 5

Store it in the storage bag provided until your next event.